




ASSEMBLY INSTRUCTIONS

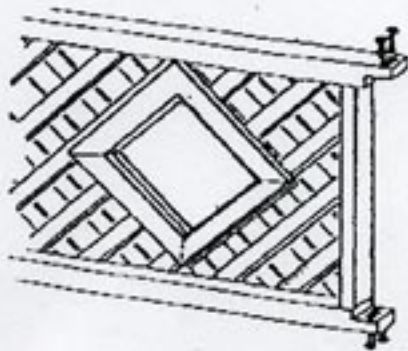

- 1.) Drive 4 carriage bolts through lattice sides as shown.

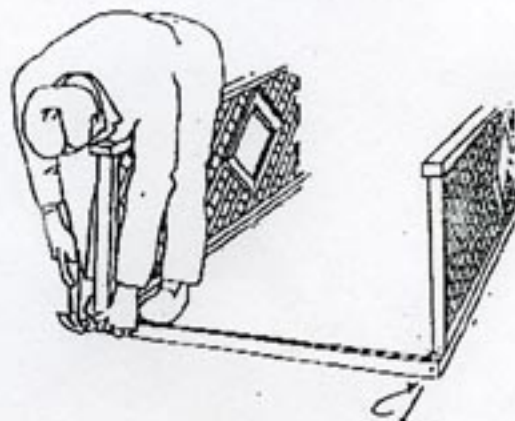


- 2.) Place lattice sides approximately 3 feet apart, with vertical lath to outside, nail temporary lath spreaders to bottom of sides with 1-1/8 shingle nails provided.

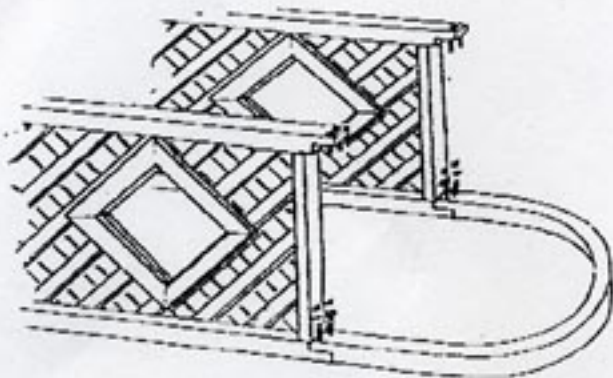


- 3.) Place holes in arch over bolts previously placed in sides and tap home with hammer, (if necessary use protective wood block to prevent marking). Place nuts & washers & tighten with wrench.

3A.) Turn whole structure end for end and place other arch repeating step 3.

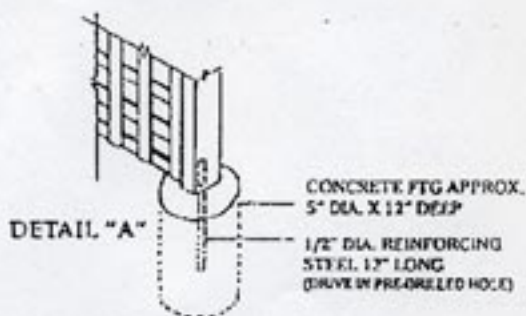

- 6.) If arch is to be free standing, (i.e. not attached to building or fence) anchor to ground as shown in Detail "A".

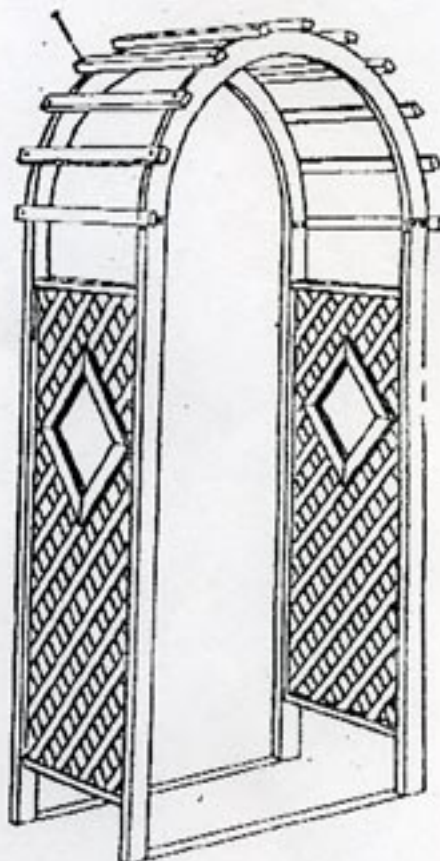

- 4.) Stand structure in normal vertical position. Standing on a ladder, nail 1 x 2 overhead pieces in position where marked, keeping predrilled holes centered on arch.
- 5.) Move to final position, remove bottom spreaders & anchor to fence or ground.

May not be exactly
as illustrated.